

```
1
2 @brief      Copy blinky to seperate dir
3 @details    Using nRF5SDK160098a08e2
4 @auth       Justin Reina
5 @date       6/9/20
6
7 @section    Demo
8   @loc      C:/Program Files/Nordic Semiconductor/nRF5SDK160098a08e2/
9             examples/peripheral/blinky
10  @dest     D:/Documents/Work/WorkByDay/20_06_09/blinky
11  @proj     blinky/pca10056/blank
12
13 @section    Procedure [1]
14
15   • Copy full directory of project [#7B60]
16
17   • Remove all .emSession files (e.g.
18     blinky/pca10056/blank/ses/blinky_pca10056.emSession) [#8764]
19
20   • Open project (blinky.eww), remove all targets except selected (e.g.
21     blinky_pca10056 - nrf52840_xxaa) [#4722]
22
23   • Remove mbr/ config [#5748]
24
25   • blinky_pca10056.emProject convert all paths to absolute [#EB08]
26
27   • update makefile to absolute (SDK_ROOT & PROJ_DIR) [#E9AB]
28
29   • update iar project files to absolute paths [#A79B]
30     main.xcl
31     blinky_pca10056.ewt
32     blinky_pca10056.ewp
33     blinky_pca10056.dep
34
35   • Clean, make & deploy!
36
37 @section    Reference
38
39   1. https://devzone.nordicsemi.com/f/nordic-q-a/44638/how-to-move-an-sdk-
40     example-out-of-the-sdk-tree
```