I cannot success
Page5　2-2_Install-firmware-with-segger-J-link

Is it concerned with the problem
that I cannot get expected
(2) ～(6) logs？

【1】 In the directory jlink.exe exists, I've ran "jlink.exe".

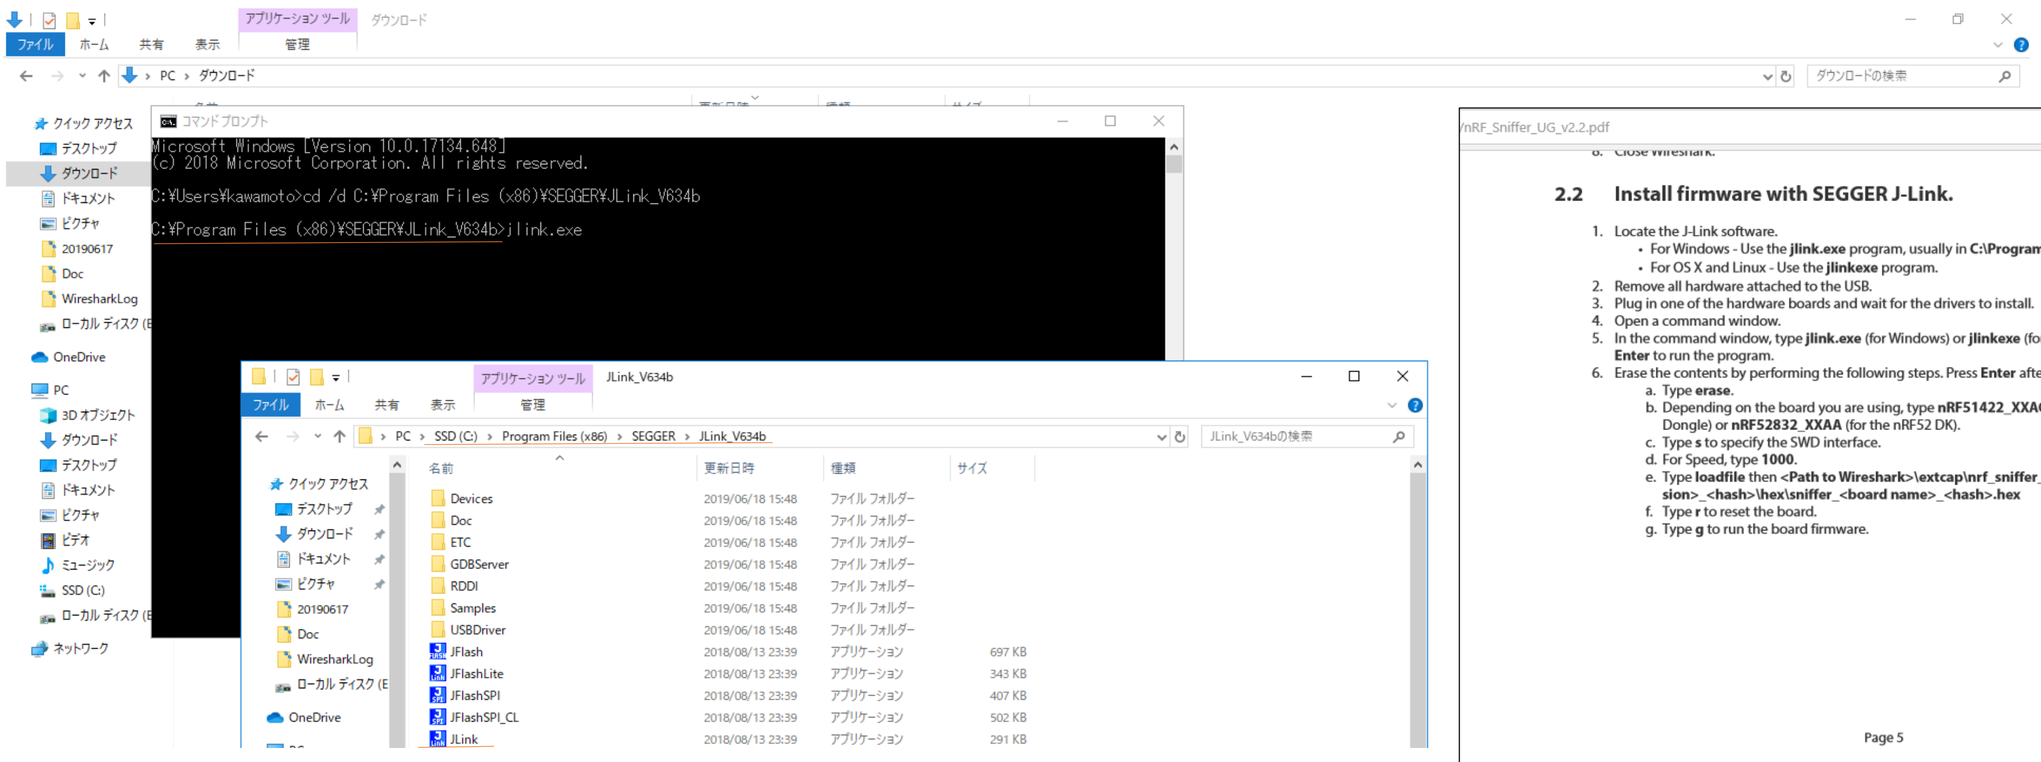

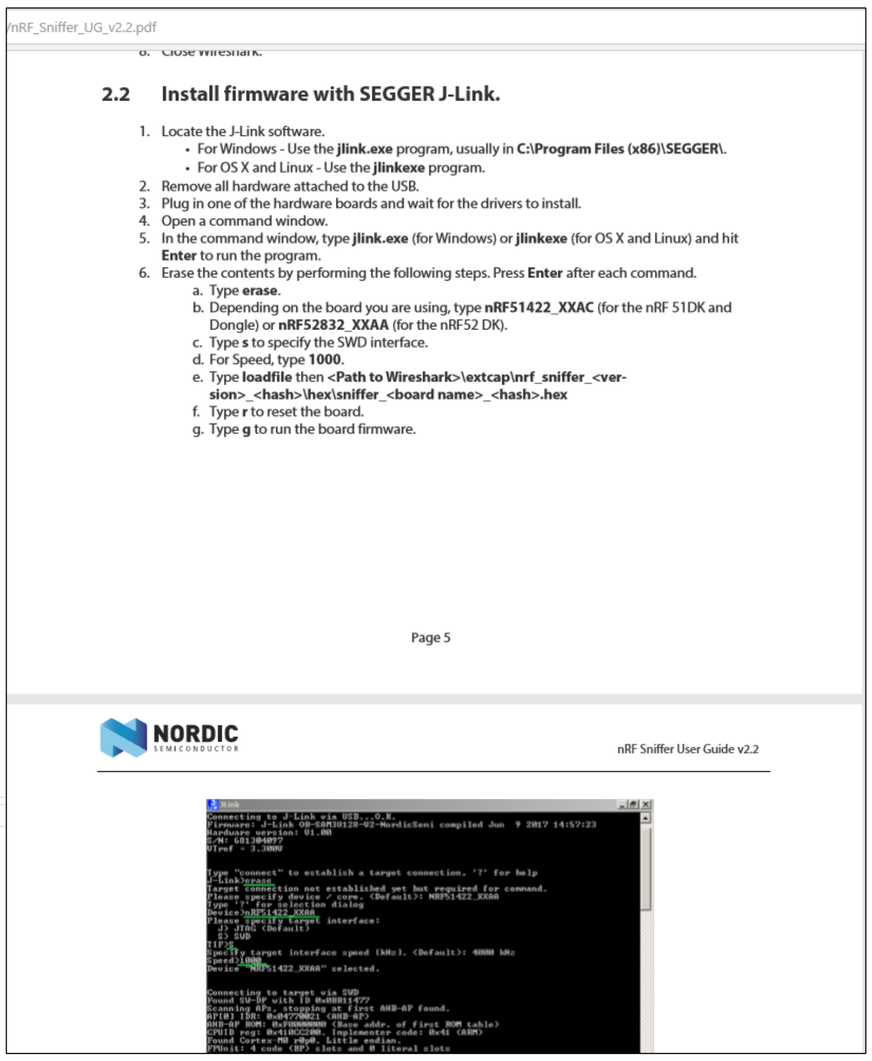

2.2 Install firmware with SEGGER J-Link.

1. Locate the J-Link software.
   - For Windows - Use the **jlink.exe** program, usually in **C:\Program Files (x86)\SEGGER**.
   - For OS X and Linux - Use the **jlinkexe** program.
2. Remove all hardware attached to the USB.
3. Plug in one of the hardware boards and wait for the drivers to install.
4. Open a command window.
5. In the command window, type **jlink.exe** (for Windows) or **jlinkexe** (for OS X and Linux) and hit **Enter** to run the program.
6. Erase the contents by performing the following steps. Press **Enter** after each command.
   a. Type **erase**.
   b. Depending on the board you are using, type **nRF51422_XXAC** (for the nRF 51DK and Dongle) or **nRF52832_XXAA** (for the nRF52 DK).
   c. Type **s** to specify the SWD interface.
   d. For Speed, type **1000**.
   e. Type **loadfile** then **<Path to Wireshark>\extcap\nrf_sniffer_<version>_<hash>\hex\sniffer_<board name>_<hash>.hex**
   f. Type **r** to reset the board.
   g. Type **g** to run the board firmware.

Page 5

NORDIC SEMICONDUCTOR　nRF Sniffer User Guide v2.2

【2】 The popup has appeared.

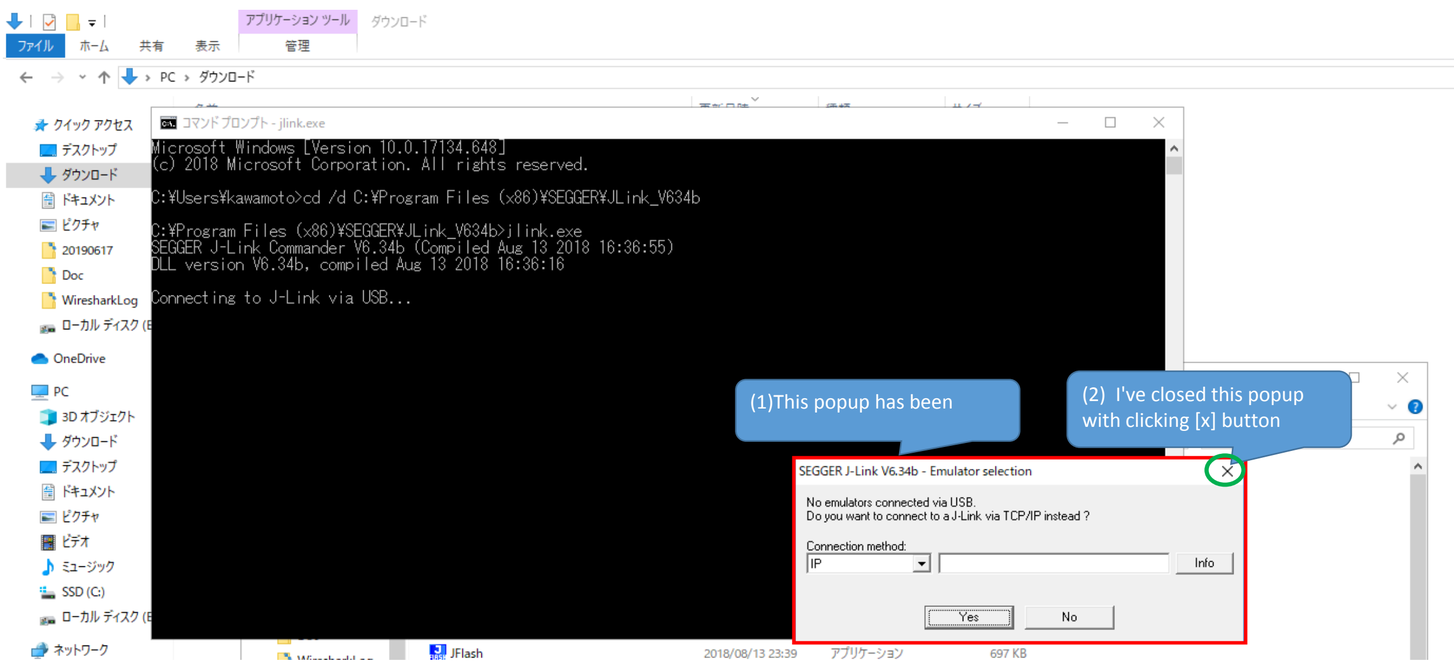

【3】 I haven't be able to connect.

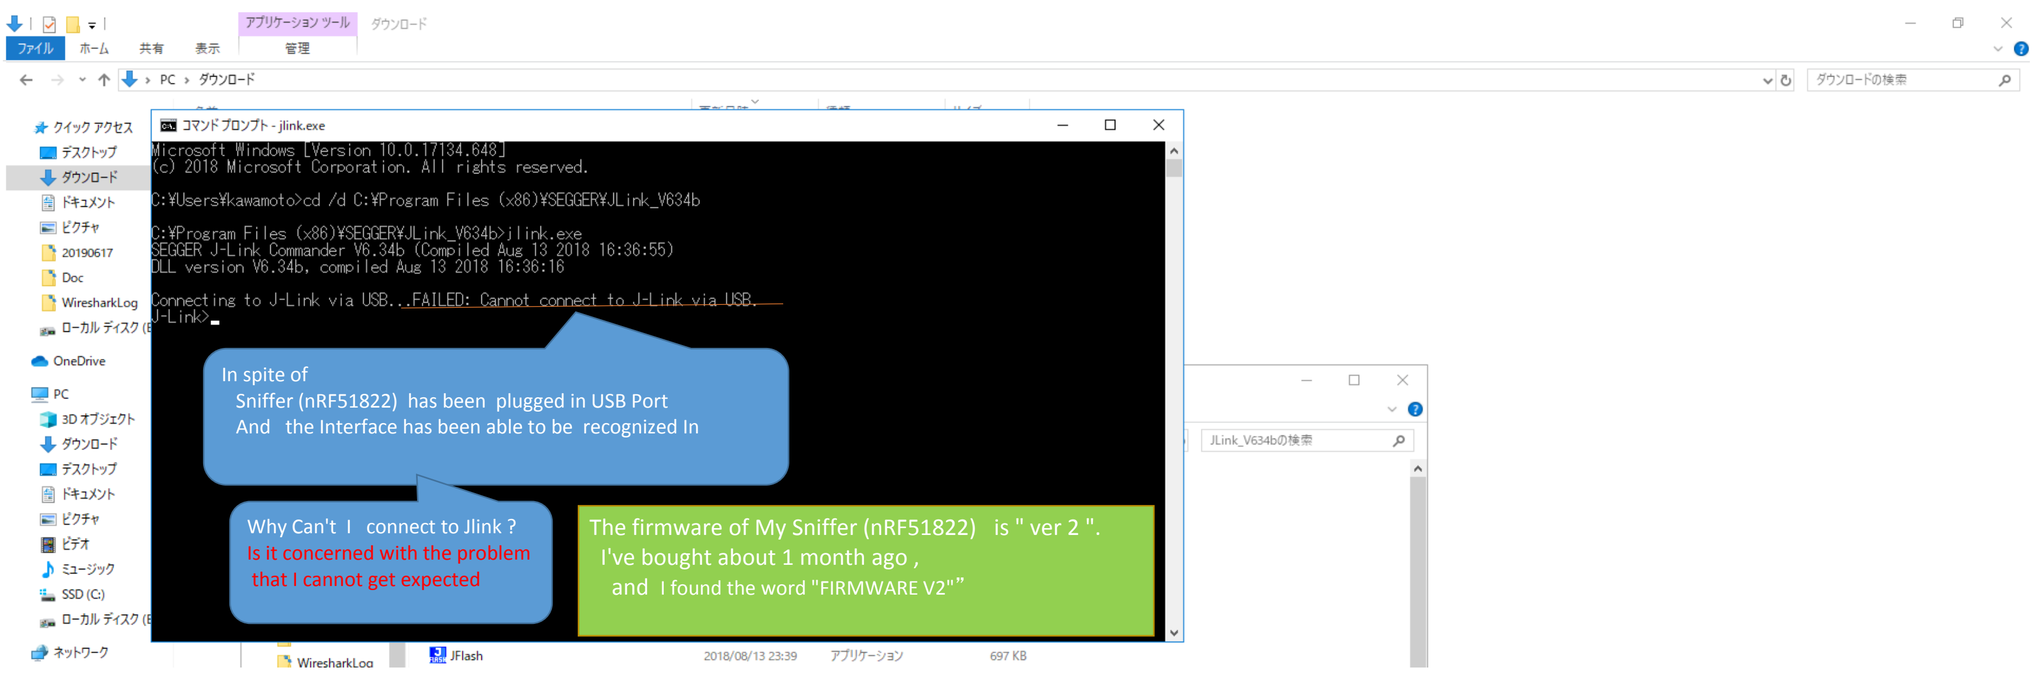
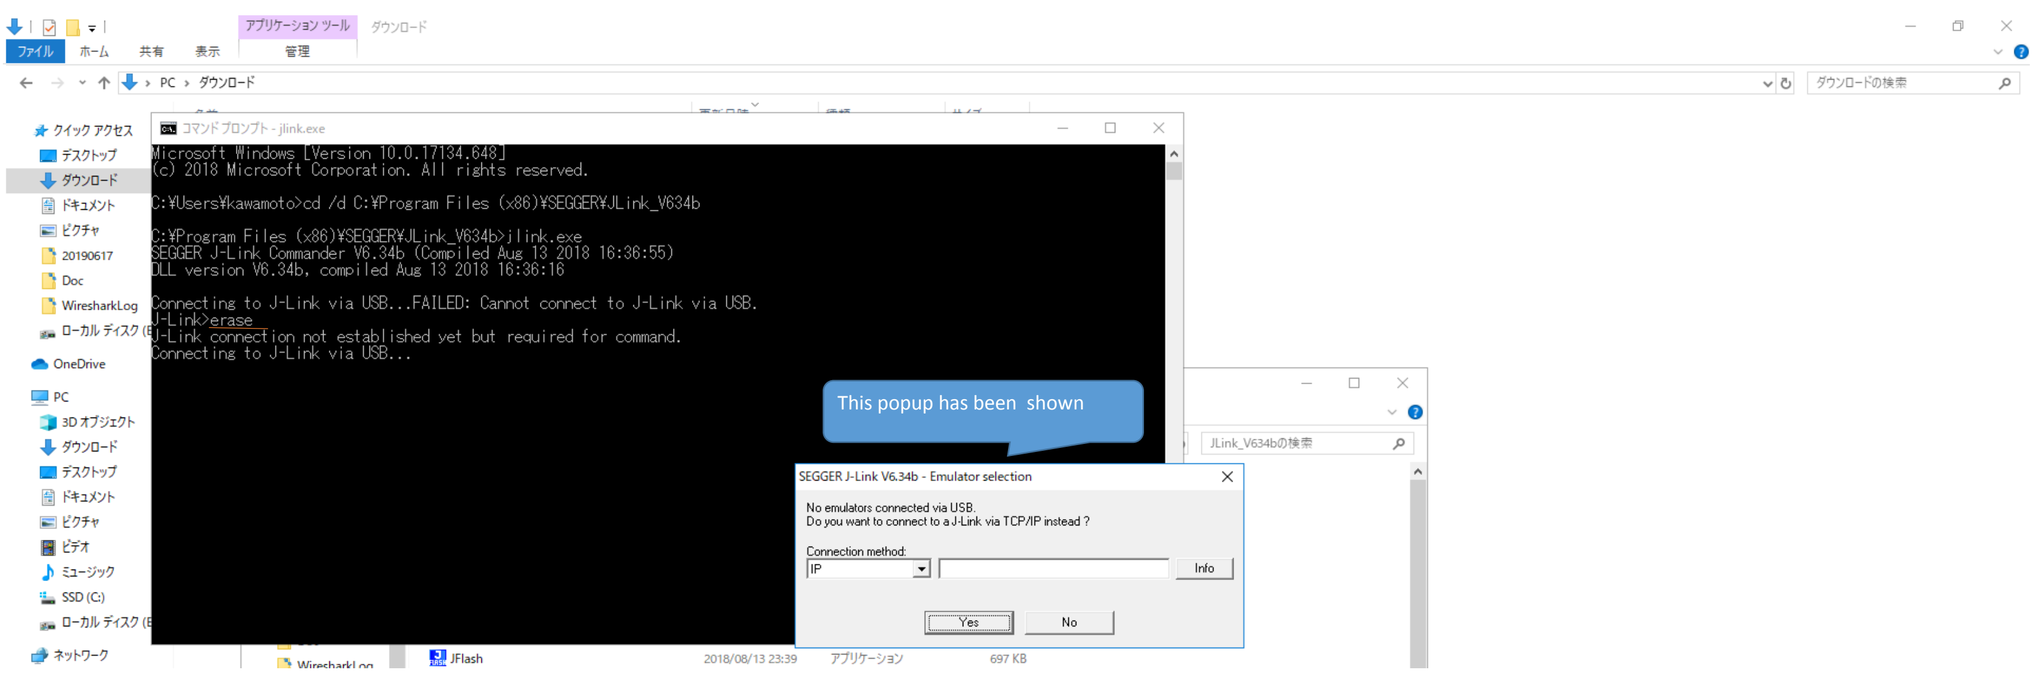
【4】 I've typed "erase" as the document.
The popup has appeared again.