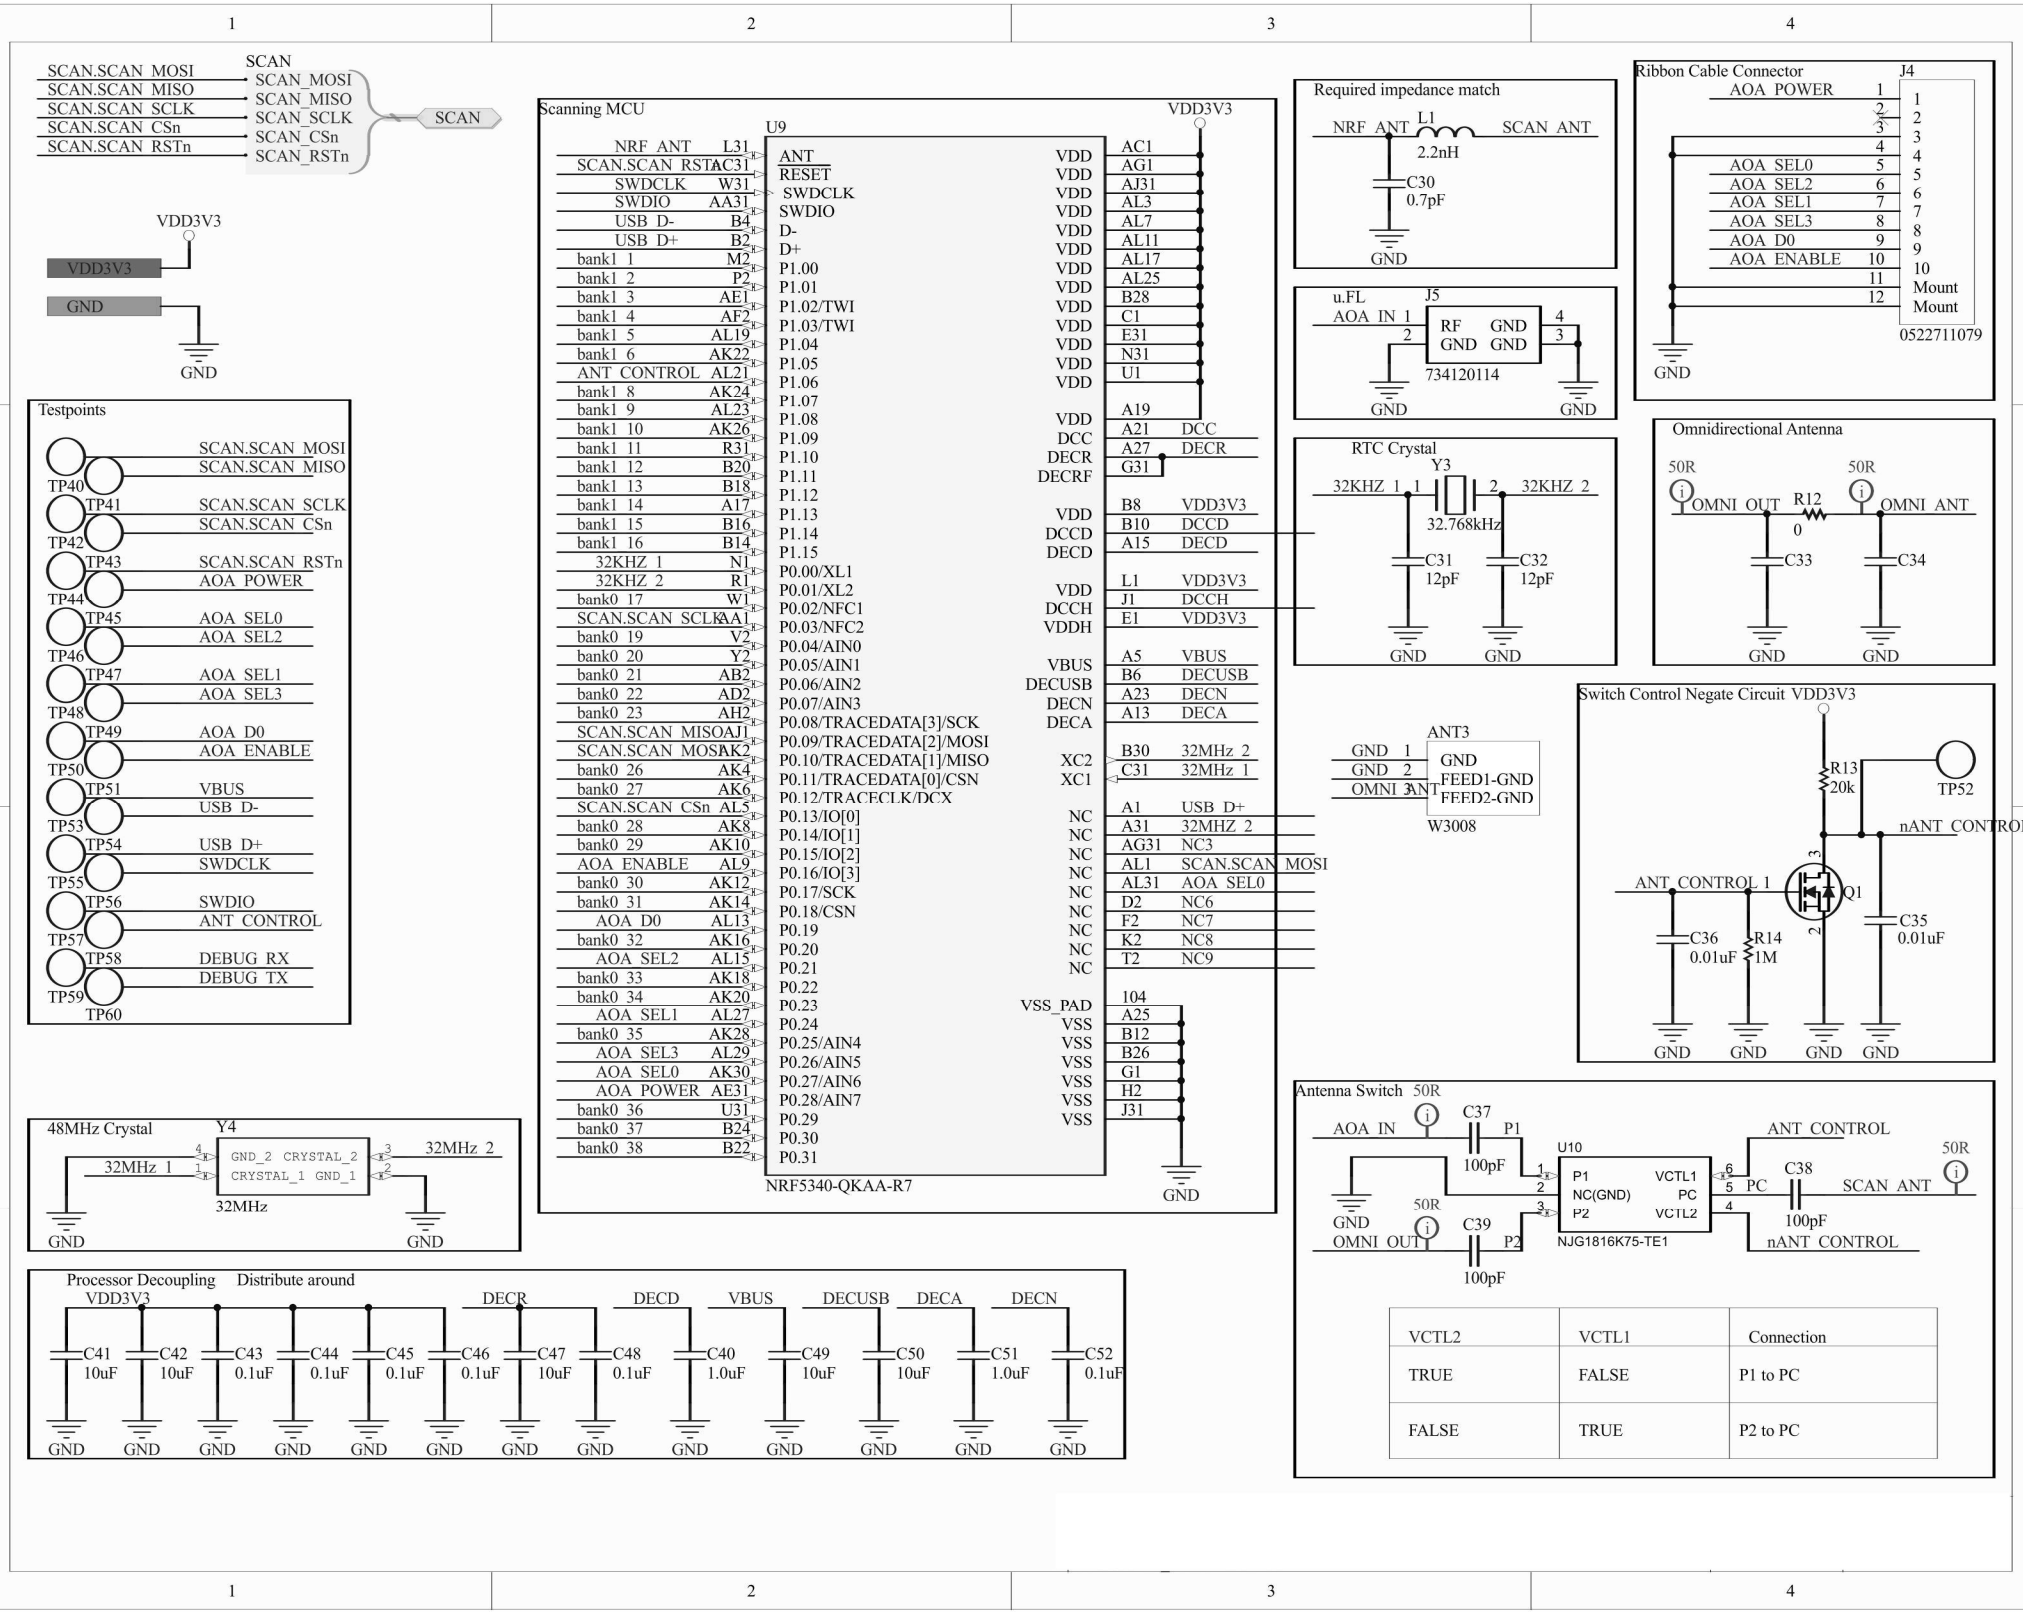

VCTL2	VCTL1	Connection
TRUE	FALSE	P1 to PC
FALSE	TRUE	P2 to PC